


120V/30A Replacement Receptacle

Instructions:

1. Disconnect power. Strip outer insulation 2-1/2 inches and strip each conductor 1/2 inch.
2. Remove receptacle cover.
3. Attach black wire under black set screw, white wire under silver set screw and green wire under green set screw. Be sure to secure each set screw tightly.
4. Re-attach cover and screws.

WARNING: Failure to wire as instructed may cause personal injury and could cause damage to equipment. Should be installed by a qualified person or an electrician only.

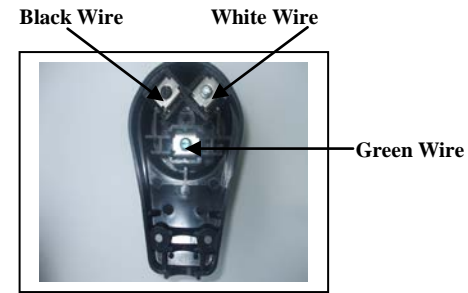

Progressive Industries, Inc.
Morrisville, NC 27560
(919) 462-8280
www.progressiveindustries.net

