



# PROsine™ 2.0

2000 watt Inverter • Charger

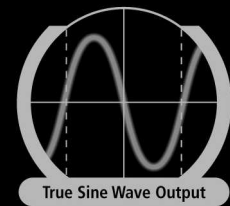

## Display Panel Mounting Template

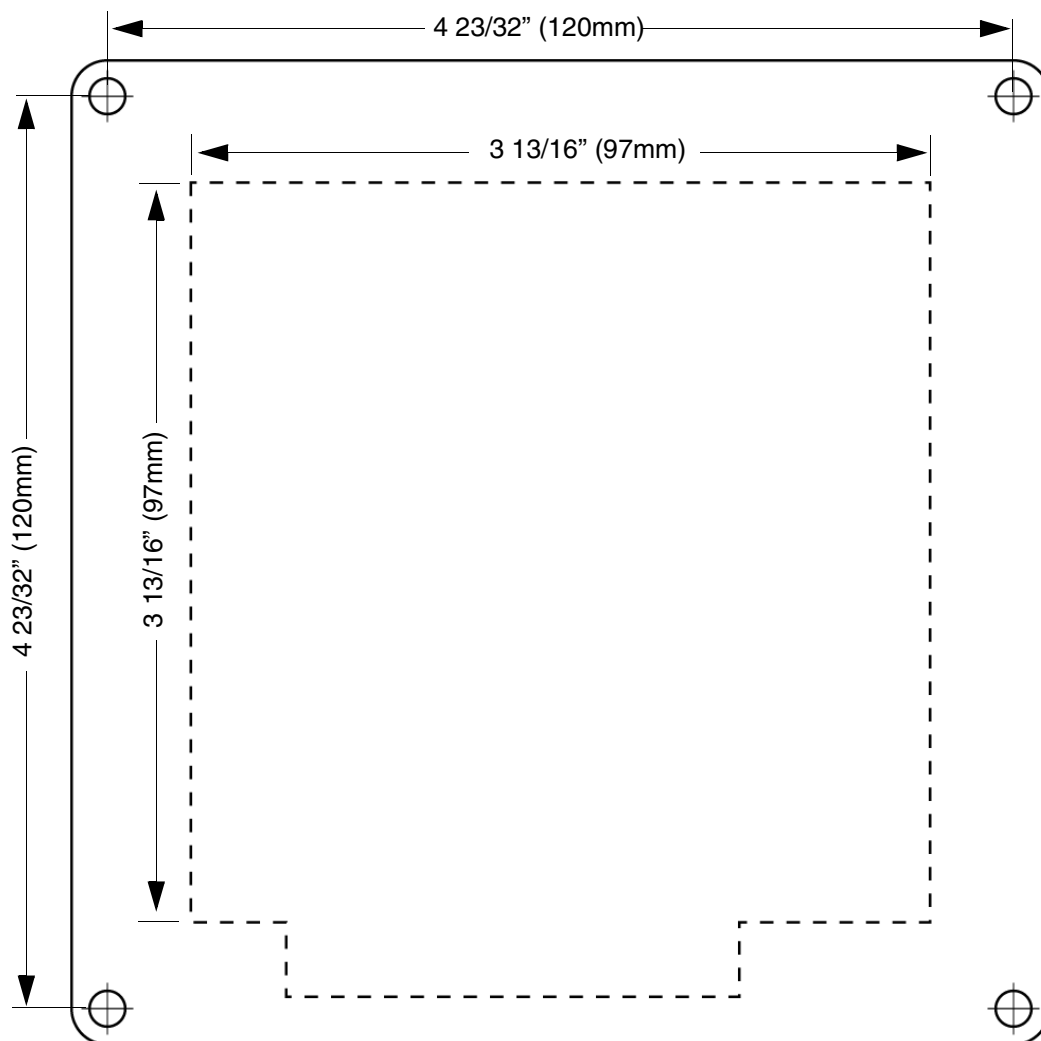

- If you have printed this template from an electronic file, measure the drawing and ensure that it matches the stated dimensions.
- Use either jack to connect the display panel to the inverter•charger.
- Fasten the panel with #6 (or #8) panhead or roundhead screws.